GPS Jumper Installation

IntelliNode GPS functionality requires installation of a jumper on pins 1 and 2, on the CCP side of the JP3 Connector. See Figure 1 for the location of Connector JP3, and Figure 2 for correct jumper installation.

GPS functionality is supported by IntelliNode Installer 1.7.7 and later revisions. If your IntelliNode has an earlier revision it must be updated to 1.7.7 or a later revision.

PART REQUIRED

Catalog Number 459-000071-02 Jumper Shunt

TOOLS REQUIRED

#1 Phillips screwdriver

#2 Straight-blade screwdriver

For the Panel-Mount IntelliNode

- 1. Remove the four Phillips screws that attach the top cover to the processor chassis, and remove the cover.
- 2. Locate the Connector JP3, see Figure 1.
- 3. Install the Jumper Shunt on pins 1 and 2 of Connector JP3, see Figure 2.
- 4. Replace the top cover on the processor chassis, and reinstall the four Phillips screws.
- 5. Install IntelliNode Software Revision 1.7.7 or later.

For the Rack-Mount IntelliNode

- 1. Remove the six Phillips screws on the top cover.
- 2. Remove the four Phillips screws at the top of the front panel, see Figure 3 on page 2.
- 3. Remove the four slotted screws at the top of the back panel, see Figure 4 on page 2, and remove the top cover.

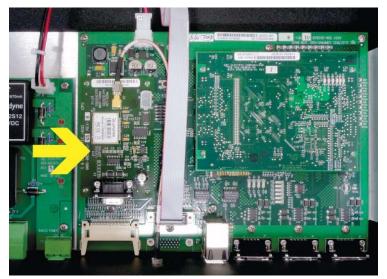


Figure 1. Location of connector JP3 on the GPS Board.

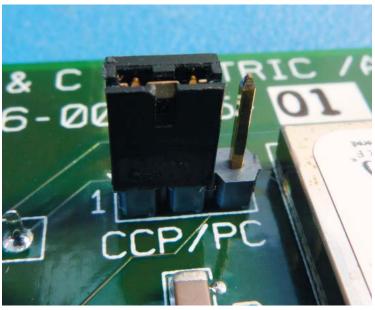


Figure 2. Correct installation of the jumper on the CCP side of JP3.

- 4. Locate Connector JP3, see Figure 1 on page 1.
- 5. Install the Jumper Shunt on pins 1 and 2 of Connector JP3, see Figure 2 on page 1.
- 6. Replace the top cover, and reinstall the fourteen screws.
- 5. Install IntelliNode Software Revision 1.7.7 or later.



Figure 3. Top plate attachment screw locations on the front panel.



Figure 4. Top plate attachment screw locations on the rear panel.